


# SINGLE PUMP SUBMERSIBLE CONSTANT PRESSURE LAYOUT

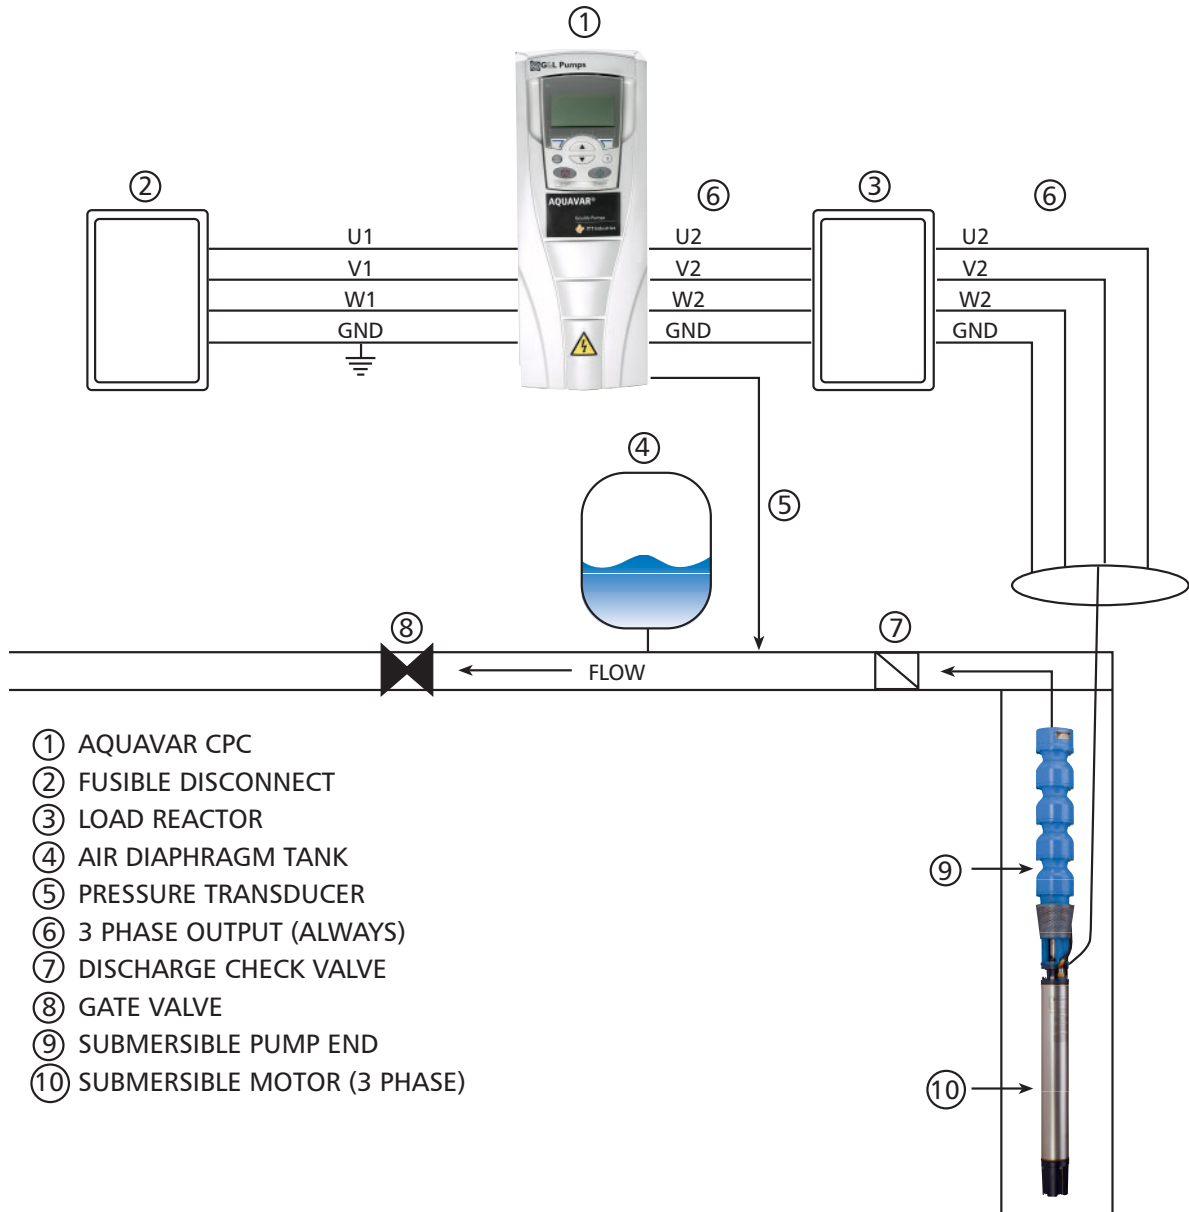

- ① AQUAVAR CPC
- ② FUSIBLE DISCONNECT
- ③ LOAD REACTOR
- ④ AIR DIAPHRAGM TANK
- ⑤ PRESSURE TRANSDUCER
- ⑥ 3 PHASE OUTPUT (ALWAYS)
- ⑦ DISCHARGE CHECK VALVE
- ⑧ GATE VALVE
- ⑨ SUBMERSIBLE PUMP END
- ⑩ SUBMERSIBLE MOTOR (3 PHASE)